
















**MT-07 Multi Mount Base Kit**

**MT-07 Multi Mount Base Kit**


Posnr.	QTY		
①	1		
②	1		
③	2		M8 X 50mm
④	2		M8
⑤	2		M8
⑥	2		M6 X 28mm
⑦	2		M6
⑧	2		M6
⑨	4		M5 X 18mm
⑩	4		
⑪	4		M5
⑫	2		




**Middle Screen (Not included)**

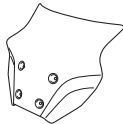Posnr.	QTY	
Ⓐ	1	


**Fly Screen (Not included)**

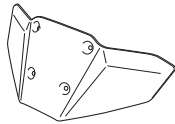Posnr.	QTY	
Ⓑ	1	

**Aluminum Visor (Not included)**

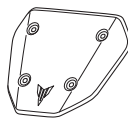Posnr.	QTY	
Ⓒ	1	

**Image (With Middle Screen)**

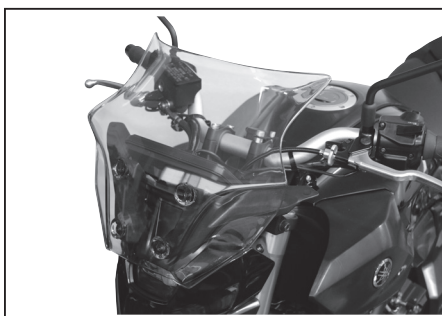

Easy, suitable for novice with little experience



Fairly easy, suitable for beginner with some experience



Fairly difficult, suitable for competent DIY mechanic





Difficult, suitable for experienced DIY mechanic



Very difficult, suitable for expert DIY or professional



**MT-07 Multi Mount Base Kit**

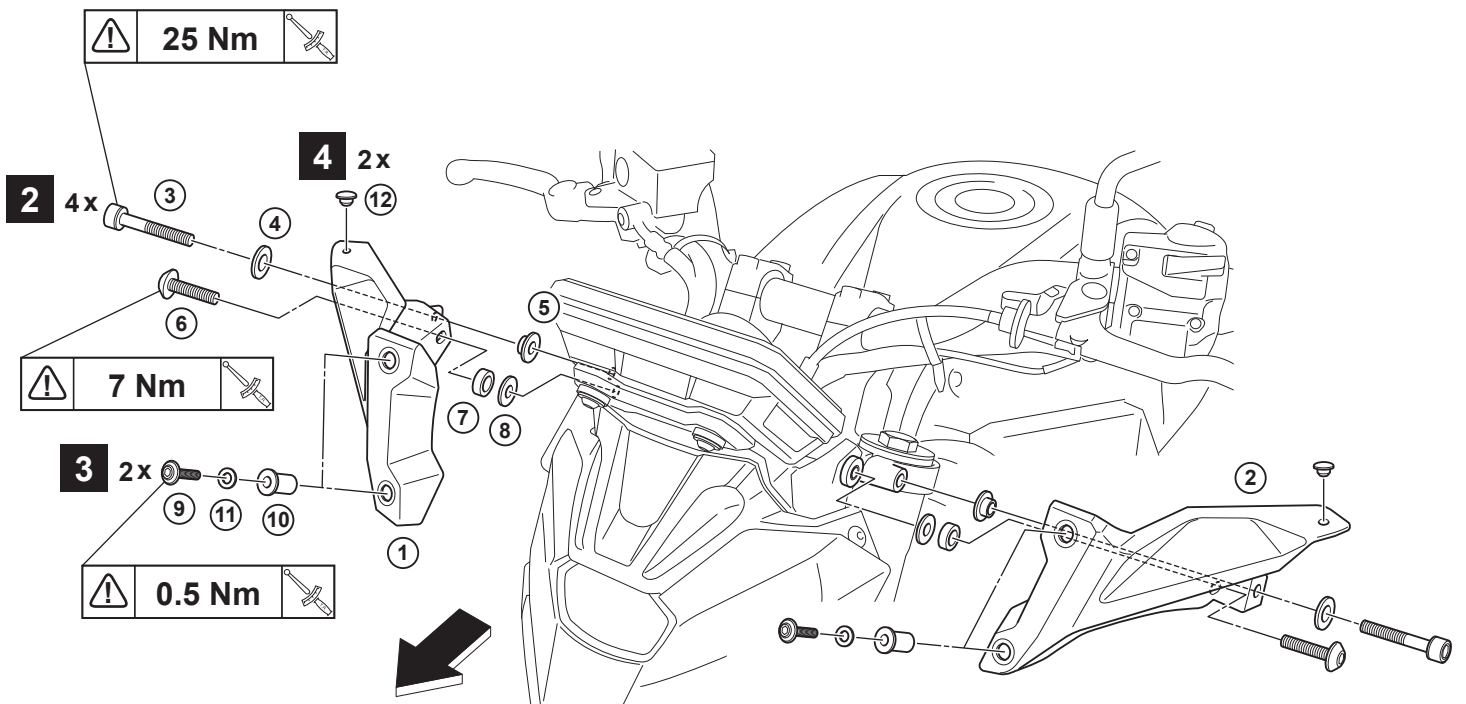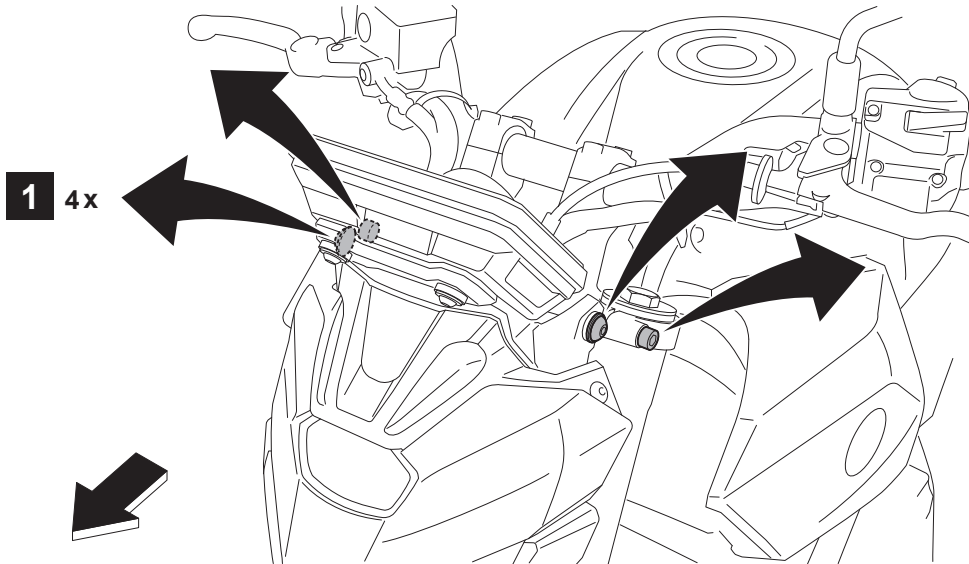

**MT-07 Multi Mount Base Kit**

**Middle Screen  
Fly Screen  
Aluminum Visor**

